


Rooomy

爪きれるんmini

型番:RM-NC610-B

取扱説明書/保証書

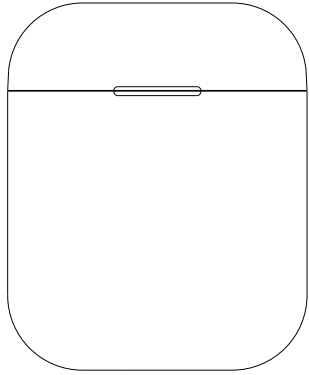

⚠ 注意

- 次のような方は使用しないでください。
爪や指先に疾患がある / 爪周りの皮膚にトラブルがある / 甘皮部が痛んでいる
- この製品は爪以外で使用しないでください。けがの原因になります。
- 初めて使用する前に本製品を充電してください。
また、充電しながら使用しないでください。
- 本体に水をかけたり、浸したりしないでください。また、浴室や湿気の多いところ、車などを含む高温な場所で保管しないでください。ショート・感電・故障の原因となります。
- 本製品には充電電池が内蔵されておりますので、火の中に投げ込んだり、高温の場所で充電したり、放置しないでください
- 本体を落としたり、強い衝撃を与えないでください。故障や破損の原因になります。衝突や落下により製品が破損した場合は使用を中止してください。
- お客様による本製品の改造、分解、修理は行わないでください。

使用上のご注意 (初めてご利用の方は必ずお読みください)

- この製品はネイルケア・皮ケア用に設計されています。それ以外の用途で使用しないでください。
- 爪を削りすぎないようにするため、同じ部分に長時間あてないでください。
- この製品は、爪の研削・研磨を行うので、使用中に粉塵のようなネイルチップが発生するのは正常です。誤作動からモーターを保護するため、本製品は 5 分間で自動にオフします。
- この製品はお子様のみでの使用は禁止です。1 歳から 12 歳までのお子様には保護者の補助が必要です。危険を避けるため、お子様の手の届かないところに保管してください。
- 製品作動中は、衣類・アクセサリー・その他の物を刃に接触させないでください。故障の原因となります。

各部名称

カバー

正面

ダストボックス

後ろ

ON/OFF

動作確認ランプ

充電口

底面

ライト

ネイルカッター

上面


同梱

本体/タイプC・Aケーブル


クリーニングブラシ/説明書

名称	爪きれるんmini
型番	RM-NC610-B
モード	2段階
サイズ	54X44X22mm
重さ	47.5g
材質	ABS,steel
充電電圧/電流	5V/125mA
電池容量	210mAh
充電時間	約2時間
使用時間	最大80分
生産国	Roduced by Japan Made in Chinaa

使用方法

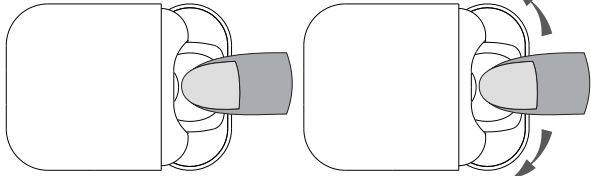


製品正面を上向きに状態で
ネイルカッター部分に爪先を入れる

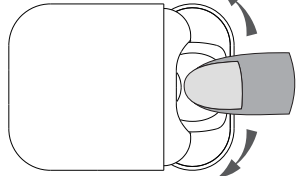


指を左右に回して、爪を丸くカット

使用上のご注意

使用時は正しい向きでネイルカッターに爪先をあててください。
逆向きに使用するとバリが出たり、上手く削れないことがあります。

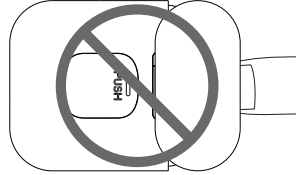

本体向きを逆にして使用しない

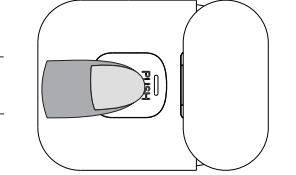

pushを押して、削り屑を捨てる

使用方法

1.ON/OFFボタンを押すと、低速モードが始動する同時に作動表示ランプが点灯します。
ON/OFFボタンをもう一度押すと高速モードに切り替わります。もう一度押すと本体の電源がオフになり、同時に動作表示ランプが消えます。
2.シャットダウン/カバーを3秒間つけたままにすると、強制的にシャットダウンします。
3秒以内にカバーを開けると、正常に動作します。
3.ご使用前に本製品のカバーを開け、製品の正面が上(ダストボックスのある面が下)になっていることを確認してください。
凹みのある位置に指を置き、爪をネイルカッターの開口部に置き、爪をネイルカッターに向けて軽く押しあてます。
同時に爪や本製品をゆっくりと左右に動かして(速すぎたり、強すぎたりしないでください)、爪全体を丸く整えます。

クリーン

製品の電源を切り、ダストボックスの蓋を軽く押して蓋を開け、中のダストを捨ててください。クリーニングブラシを使用してダストボックス内を掃除します。
(本体の電源が入っている状態で掃除しないでください)

充電

次の状況では、本製品を適時に充電してください。
1.初めて本製品をご使用になる場合。
2.ON/OFFボタンを押しても製品が起動せず、動作表示灯が点滅してから消える場合。
3.本製品の充電には、付属のtypeC充電ケーブルと電源アダプター(5V出力)を使用してください。
4.通常の充電中は、動作表示ランプがゆっくり点滅し、充電が完了した後も点灯したままになります。完全に充電されるまでには約 1 ～ 2 時間かかります。

無料保証規定

保証期間はお買い上げ日より 1 年間有効です。(お買い上げ証明の提供必要)
製品の初期不良、自然故障された場合は、無料保証規定の範囲内で対応させて頂きます。
・使用上の誤り及び不当な修理や改造による故障及び損害は保証対象外となります。
・製造メーカーの提供した原裝部品以外の部品を使用する場合、保証対象外となります。
・保証概要：本製品は厳選なる検査のもと皆様のお手元へお届けしておりますが、万が一故障した場合は無料保証規定の範囲内で対応させて頂きます。その際は現品に本保証書、購入証明書(シート、領収書など)を添えてお買い上げ販売店へご提出ください。
・公式サイトや正規代理店以外でご購入された場合、中古品の場合は保証対象外となります。(転売等、弊社にて流通経路が不明なものは保証対象外)
・所定記入欄が空欄のままであったり、お買い上げ日がわかるシートや領収書がない場合は、保証の対象外となります。

品名	爪きれるん mini
保証対象	本体
保証期間 / ご購入日	1 年間 /
お名前 ご住所 /TEL	
お買い上げになった 店舗印またはインターネット名	

★本書は再発行致しませんので大切に保管してください。
株式会社 KALOS BEAUTY TECHNOLOGY
東京都千代田区外神田 6-14-9
秋葉原 MF ビル 28 号館 7F



【お問合せ】




【ホームページ】

Rooomy

TSUME Kirerun

RM-NC610-B

Guides to start

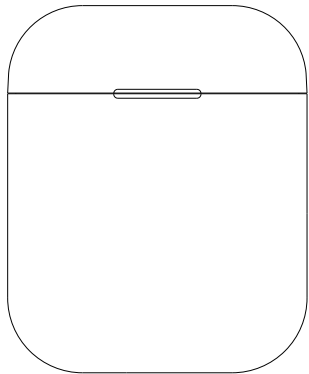

Caution/Direction (Please read this carefully when using it for the first time)

- 1.Do not use this product if you are:
Those with nail or fingertip diseases/those with skin problems around the nails/ those with pain in the cuticle area
- 2.Do not use this product for anything other than nail care. Doing so may cause injury.
- 3.Please charge this product before using it for the first time. Also, do not use it while charging.
- 4.Do not splash water on the main unit or immerse it in water. This also includes bathrooms, humid places, cars, etc.Please do not store it in a high temperature place. Doing so may cause short circuit, electric shock, or malfunction.
- 5.This product has a built-in rechargeable battery, so please do not throw it into a fire or charge it in a high temperature place.Please do not leave it unattended.
- 6.Do not drop the main unit or subject it to strong impact. Doing so may cause malfunction or damage.
If the product is damaged due to a collision or fall, please discontinue use.
- 7.Please do not modify, disassemble, or repair this product by yourself.
- 8.To avoid over-sharpening your nails, don't touch the same area for too long.
- 9.This product grinds and polishes nails, so it is normal for some dust-like nail chips to occur during use.To protect the motor from malfunction, the product will automatically turn off after 5 minutes.
- 10.This product is not for use by children alone. Children ages 1 to 12 require parental assistance.To avoid danger, please keep out of reach of children.
- 11.Do not allow clothing, accessories, or other objects to come into contact with the blade while the product is in operation. Doing so may cause a malfunction.

Product introduction

Cover

Front view

storage box

Back view

Switch key

Indicator light

Charging port

Right view

Floodlight


Nail clippers

Top view


Parameters

Name	TSUME kirerun mini
Model	RM-NC610-B
Mode	2stages
Size	54X44X22mm
Net weight	47.5g
Ratedinput	5V/125mA
BatteryCapacity	210mAh
Battery duration	80min

Using

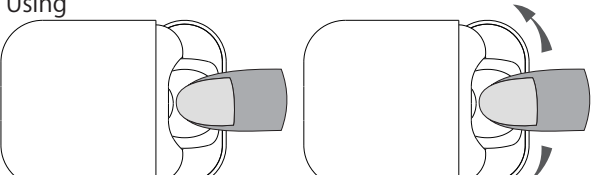


With the front of the product facing upwards Insert the tip of your nail into the nail cutter part

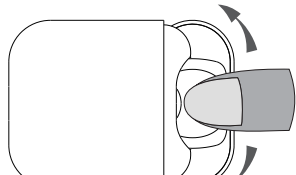


Rotate your finger left and right to cut the nail into a circle.

Reminders

The correct way to use the product is to face up and place your finger at the finger position. If the storage bin is facing up, the effect will be rough, rough and uneven after trimming.

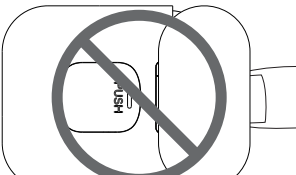

This is the wrong direction of use

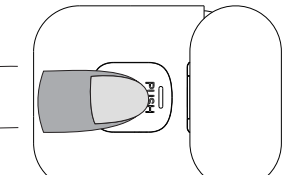

Press and lift, pour out nail debris

Using

1.Press the ON/OFF button to start low speed mode and at the same time the operation indicator lamp lights up.
Press the ON/OFF button again to switch to high speed mode. Press it again to The power turns off and the operation indicator lamp goes out at the same time.
2.Shutdown: Leave the cover on for 3 seconds to force shutdown.
If you open the cover within 3 seconds, it will work normally.
3.Before use, open the cover of this product and make sure the front of the product is facing up (the side with the dust box is facing down).
Please make sure that it is.
Place your finger on the indentation, place your nail in the opening of the nail cutter, and gently press your nail against the nail cutter.
At the same time, slowly move your nails and this product from side to side. (Don't go too fast or too hard), round the entire nail.

Cleaning

Turn off the power of the product, press the lid of the dust box lightly to open it, and discard the dust inside.
please. Clean inside the dust box using a cleaning brush.
(Do not clean while the main unit is powered on.)

Packing list

Nail clipper: 1 Charging line:(type-C/A)1
Cleaning brush:1 Instructions:1

Charging

Please charge this product under the following conditions:
1.When using this product for the first time.
2.Press the switch, the product can not be started, and the work indicator light flashes and then goes out.
3.Please use the attached type -C charging cable together with the power adapter(5V output)to charge this product.
4.During normal charging, the indicator light will flash slowly and stay on after charging.It will take about 1~2 hours to fully charge.

Customer service

Dear users, thank you for purchasing and using our products. From the date of purchase of the product,the product with quality problems can enjoy one-year free warranty service with valid bills.The service commitment is as follows :
1. No purchase notes and vouchers, or the handwriting of the purchase notes and vouchers is not clear or has been altered.
2. Failure caused by the user's failure to operate in accordance with the requirements of the operation manual.
3. Damage caused by improper storage, maintenance and use of users.
4. Faults occurred after users dismantle or disassemble, refit or add other functions by themselves.
5. Damage caused by irresistible factors
(such as lightning, fire, earthquake, flood and other natural disasters).
6. Failure and damage caused by transportation, falling, etc. after purchase.
7. Products purchased from retailers not authorized by the company.